

Portable CD Player

Operating Instructions
Használati útmutató
Инструкция по эксплуатации




D-EJ118/EJ119/EJ120

©2004 Sony Corporation Printed in China

<http://www.sony.net>

"WALKMAN" is a registered trademark of Sony Corporation to represent Headphone Stereo products. WALKMAN is a trademark of Sony Corporation.

CD player (front)/CD-lejátszó (előlről)/Проигрыватель компакт-дисков (вид спереди)

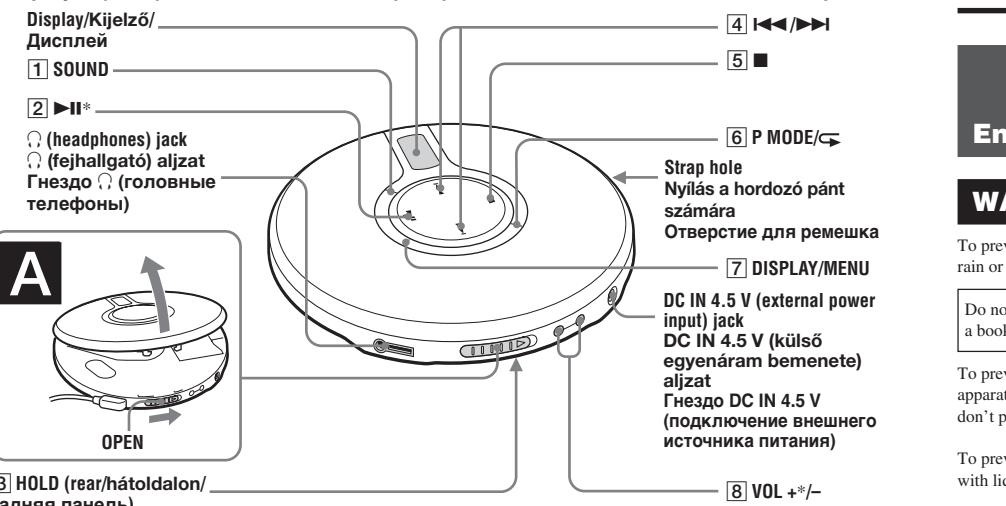


* The button has a tactile dot.
* A gombon kitápcítható egy pont.

* На этой кнопке имеется тактильная точка.



















CD player (inside)/CD-lejátszó (belső rész)/Проигрыватель компакт-дисков (внутри)



Remote control (D-EJ120 European model only)
Távirányító (csak a D-EJ120 európai típus esetén)
Пульт дистанционного управления (только модель D-EJ120 для стран Европы)

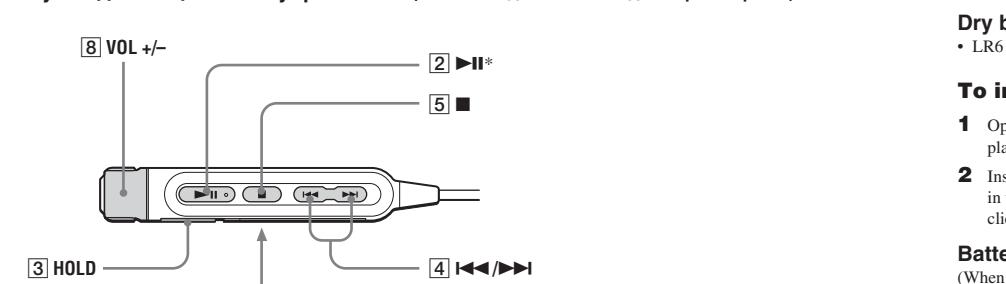

Display on the CD player/A CD-lejátszó kijelzője/Дисплей на проигрывателе для компакт-дисков

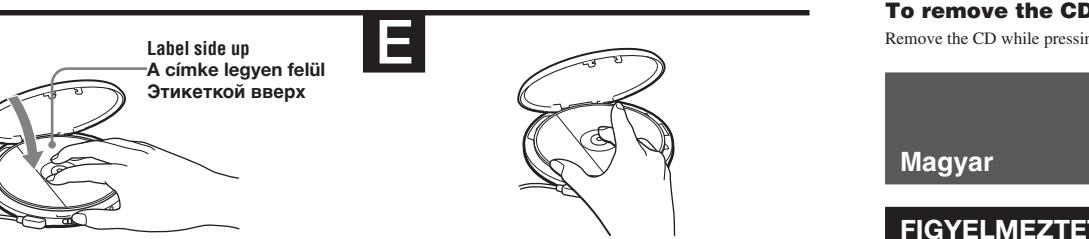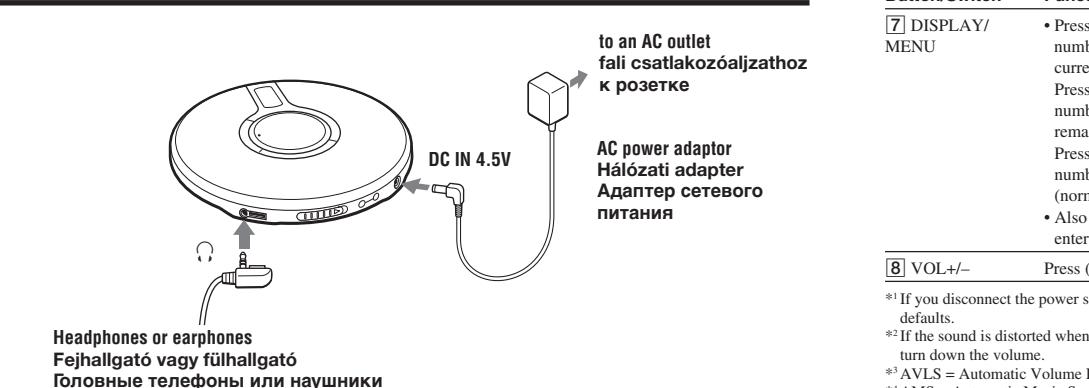

Button/Switch	Function/Operation
[7] DISPLAY/MENU	• Press once to display "track number and remaining time of the current track." • Press twice to display "the number of tracks left and the time remaining on the CD." • Press three times to display "track number and clapped playing time (normal display)." • Also press to enter the menu and enter the selection.
[8] VOL+/-	Press (or turn) to adjust the volume. ^① If you disconnect the power sources, all settings return to the defaults. ^② If the sound is distorted when using the SOUND function, turn down the volume. ^③ AVLS = Automatic Volume Limiter System ^④ AMS = Automatic Music Sensor
[9] HOLD	To remove the CD
	Remove the CD while pressing the pivot (E).

Megjegyzések

- A készülék le tud játszani Compact Disc Digital Audio (Audio CD) formátumban készített riható és újraírható CD-ket is. A lejátszás minősége azonban függ a lemez minőségétől és az író készülék állapotától.
- Ez a készülék a kompaktklemez-szabványt (Compact Disc CD) megfelelő lemezeket tud lejátszni. Az elérhető lemezek között szerepelnek hozzávalók, amelyeknél kódolással védik a szerző jogokat. Előfordulhat, hogy egyes ihenemek nem felelnek meg pontosan a kompaktklemez-szabvány előírásainak, és így ez a készülék nem tudja lejátszani őket.
- E gomb megnyomásával léphet bele a menübe, valamint tárolhatja/érnyékelheti a kijelölt éréket/beállítást.

• Nyomja meg (vagy forgassa) a hangerő szabályozásához.

^①Ha eltávolít minden áramforrást, mindenütt az alapbeállítások lépnek érvényre.

^②Ha a SOUND funkció használatakor a hang eltorzul, csökkenése a hangerő.

^③AVLS = Automatic Volume Limiter System (automatikus hangerő-korlátozó rendszer).

^④AMS = Automatic Music Sensor (automatikus hangérzékelő).

CD-lemez lejátszása

Gomb/Kapcsoló Funkció/Művelet

[7] DISPLAY/MENU

• A „műsorszám számának és az aktuális műsorszámiból még hátralevő játékidőnek” a megjelenítéséhez egyszer nyomja meg.

A „CD-meg le né meg játszott műsorszámok számának és a CD még hátralevő játékidőjének” a megjelenítéséhez készzer nyomja meg.

A „műsorszám számának és a belőle már lejátszott rész hosszának (normál kijelzés)” a megjelenítéséhez háromszor nyomja meg.

E gomb megnyomásával léphet bele a menübe, valamint tárolhatja/érnyékelheti a kijelölt éréket/beállítást.

• Nyomja meg (vagy forgassa) a hangerő szabályozásához.

^①Ha eltávolít minden áramforrást, mindenütt az alapbeállítások lépnek érvényre.

^②Ha a SOUND funkció használatakor a hang eltorzul, csökkenése a hangerő.

^③AVLS = Automatic Volume Limiter System (automatikus hangerő-korlátozó rendszer).

^④AMS = Automatic Music Sensor (automatikus hangérzékelő).

CD-lemez behelyezése

Gomb/Kapcsoló Funkció/Művelet

[1] OPEN

• 1 Az OPEN gombot eltolva nyissa fel a fedeleit (A).

• 2 Illessz a CD-t a tengelyre, majd csukja be a fedeleit (D).

To remove the CD

Gomb/Kapcsoló Funkció/Művelet

[9] HOLD

• A címke legyen felül

• A

Playing your favorite tracks by adding Bookmarks (Bookmark track play)

You can add Bookmarks to up to 99 tracks for each CD. You can use this function for up to 5 CDs.

To add Bookmarks

- During playback of the track where you want to add a Bookmark, press and hold **►II** until "Bookmark" flashes on the display.
- When the Bookmark has been added successfully, flashing of "Bookmark" becomes slow.
- Repeat step 1 to add Bookmarks to the tracks you want.

To listen to the tracks with Bookmarks

- Press P MODE/► repeatedly until "Bookmark" flashes.
- Press **►II**. "Bookmark" lights up in the display and the playback of the tracks with Bookmarks starts.

To remove the Bookmarks

During playback of the track with a Bookmark, press and hold **►II** until "Bookmark" disappears from the display.

To check the tracks with Bookmarks

During playback of the tracks with Bookmarks, "Bookmark" keeps flashing slowly in the display.

Notes

- During playback of the tracks with Bookmarks, tracks are played in order of track number, and not in the order you added the Bookmarks.
- If you try to add Bookmarks to the tracks on the 6th CD, the Bookmarks of the CD you played back first will be erased.
- If you remove all power sources, all Bookmarks stored in memory will be erased.

Playing tracks in your favorite order (PGM play)

You can program the CD player to play up to 64 tracks in your favorite order.

- During playback, press P MODE/► repeatedly until "PGM" appears.
- Press **◀** or **▶II** to select a track.
- To enter the selected track, press and hold **►II** until the playing order increases by one. "00" appears and the playing order increases by one.
- Repeat steps 2 and 3 to select the tracks in your favorite order.
- Press **►II** to start PGM play.

To check the program

During programming: Press and hold **►II** repeatedly before step 5.

During the PGM play: Press P MODE/► repeatedly until "PGM" flashes, then press and hold **►II** repeatedly.

Each time you press **►II**, the track number appears.

Notes

- When you finish entering the 64th track in step 3, the first selected track appears in the display.
- If you select more than 64 tracks, the first selected tracks are erased.

Other functions

You can make the following settings using the menu.

The timer function

You can set the CD player to stop playback automatically within a range of 1 to 95 minutes at 5 minute intervals. When the CD player is playing and the timer function is activated, the track number flashes on the display.

The G-PROTECTION function

This function has been developed to provide excellent protection against sound skipping during many active uses.*

Turning off the beep sound

You can turn off the beep sound that is heard from your headphones/earphones when you operate your CD player.

* Sound may skip:
- if the CD player receives stronger continuous shock than expected.
- if a dirty or scratched CD is played or
- when using poor-quality CD-R/CD-RW or if there is a problem with the recording device or application software.

How to set

- While play is stopped, press DISPLAY/MENU until "t-SET" appears.

From this step on, start the next operation within 15 seconds after you finish the previous operation. If the indications on the display disappear, start from step 1 again.

- Press **◀** or **▶II** to select the Menu 1 item, then press DISPLAY/MENU or **►II**.

The Menu 2 item starts flashing.

- Press **◀** or **▶II** to select the Menu 2 item, then press DISPLAY/MENU or **►II** to enter the selection.

When the item has been entered properly, the item stops flashing.

Maintenance

To clean the casing

Use a soft cloth slightly moistened in water or a mild detergent solution. Do not use alcohol, benzine or thinner.

To clean the plugs

If the plugs become dirty, there is no audio or noise is heard. Clean them with a dry soft cloth periodically.

Troubleshooting

Should any problem persist after you have made these checks, consult your nearest Sony dealer.

"Hold" appears in the display when you press a button, and the CD does not play.

→ The buttons are locked. Slide HOLD back.

To return to the previous screen, press **■**.

To cancel the setting operation, press and hold **■**.

List of menus

Setting	Menu 1 →	Menu 2
Timer*	t-SET	--
		05
		:
		95
G-PROTECTION	SEt	on
		off
Turning off the beep sound	bEEP	b on
		b off

* You can set this item during both play and stop. The time set is estimated.

Note

If you disconnect the power sources, all settings return to the defaults.

Specifications

System

Compact disc digital audio system

Laser diode properties

Material: GaAlAs

Wavelength: $\lambda = 780$ nm

Emissivity duration: Continuous

Laser output: Less than 44.6 mW (This output is the value measured at a distance of 200 mm from the objective lens surface on the optical pick-up block with 7 mm aperture.)

Power requirements

• Two LR6 (size AA) batteries: 1.5 V DC × 2

• AC power adaptor (DC IN 4.5 V jack):

220 V, 50 Hz (Model for China)

120 V, 60 Hz (Model for Mexico)

Dimensions (wh/d) (without projecting parts and controls)

Approx. 135.8 × 28.2 × 135.8 mm (5 ½ × 1 ¼ × 5 ½ in.)

Mass (excluding accessories)

Approx. 180 g (6.4 oz)

Operating temperature

5°C - 35°C (41°F - 95°F)

Design and specifications are subject to change without notice.

Supplied Accessories

D-EJ118

Headphones/earphones (1)

D-EJ119

AC power adaptor (1)

D-EJ120

AC power adaptor (1)

Headphones/earphones (1)

Remote control (1)

On dry batteries

• Do not throw the batteries into fire.

• Do not carry the batteries with coins or other metallic objects. It can generate heat if the positive and negative terminals of the battery are accidentally contacted by a metallic object.

• Do not mix new batteries with old ones.

• Do not use different types of batteries together.

• When batteries are not to be used for a long time, remove them.

• If battery leakage occurs, wipe off any deposit in the battery compartment and install new batteries.

In case the deposit adheres to you, wash it off thoroughly.

On the CD player

• Keep the lens on the CD player clean and do not touch it. If you do so, the lens may be damaged and the CD player will not operate properly.

• Do not put any heavy object on top of the CD player. The CD player and the CD may be damaged.

• Do not leave the CD player in a location near heat sources, or in a place subject to direct sunlight, excessive dust or sand, moisture, rain, mechanical shock, unleveled surface, or in places with windows closed.

• If the CD player causes interference to the radio or television reception, turn off the CD player or move it away from the radio or television.

• Discs with non-standard shapes (e.g., heart, square, star) cannot be played on this CD player. Attempting to do so may damage the CD player. Do not use such discs.

On headphones/earphones

Road safety

Do not use headphones/earphones while driving, cycling, or operating any motorized vehicle. It may create a traffic hazard or is illegal in some areas. It can also be potentially dangerous to play your headphones at high volume while walking, especially at pedestrian crossings. You should exercise extreme caution or discontinue use in potentially hazardous situations.

Preventing hearing damage

Avoid using headphones/earphones at high volume.

Hearing experts advise against continuous, loud and extended play. If you experience a ringing in your ears, reduce volume or discontinue use.

Consideration for others

Keep the volume at a moderate level. This will allow you to hear outside sounds and to be considerate to the people around you.

Maintenance

To clean the casing

Use a soft cloth slightly moistened in water or a mild

detergent solution. Do not use alcohol, benzine or thinner.

To clean the plugs

If the plugs become dirty, there is no audio or noise is heard.

Clean them with a dry soft cloth periodically.

Troubleshooting

Könyvjelzővel megjelölt műsorszámok lejátszása (könyvjelző lejátszás)

Minden CD-n legfeljebb 99 műsorszám lejátszható meg könyvjelzővel. És ez legfeljebb 5 CD esetén tehető meg.

A kedvenc műsorszámok megjelölése könyvjelzővel, és a megjelölt műsorszámok lejátszása (könyvjelző lejátszás)

Minden CD-n legfeljebb 99 műsorszám lejátszható meg könyvjelzővel. És ez legfeljebb 5 CD esetén tehető meg.

Műsorszámok lejátszása a kívánt sorrendben (PGM-lejátszsás)

Játszik a kívánt műsorszámok sorrendje a könyvjelzőn.

Bookmarks lejátszása a kívánt sorrendben (Bookmark track play)

Amikor a könyvjelzővel megjelölt műsorszámok sorrendje nem a könyvjelző megadásának sorrendjét tükrözi, hanem az egyes műsorszámok lenyomata elfogalt helyének felel meg, azaz a műsorszámok a lejátszási sorrendben lévő könyvjelzők törlődnek.

Bookmarks lejátszása a kívánt sorrendben (Bookmark track play)

Amikor a könyvjelzővel megjelölt műsorszámok sorrendje nem a könyvjelző megadásának sorrendjét tükrözi, hanem az egyes műsorszámok lenyomata elfogalt helyének felel meg, azaz a műsorszámok a lejátszási sorrendben lévő könyvjelzők törlődnek.

Bookmarks lejátszása a kívánt sorrendben (Bookmark track play)

Amikor a könyvjelzővel megjelölt műsorszámok sorrendje nem a könyvjelző megadásának sorrendjét tükrözi, hanem az egyes műsorszámok lenyomata elfogalt helyének felel meg, azaz a műsorszámok a lejátszási sorrendben lévő könyvjelzők törlődnek.

Bookmarks lejátszása a kívánt sorrendben (Bookmark track play)

Amikor a könyvjelzővel megjelölt műsorszámok sorrendje nem a könyvjelző megadásának sorrendjét tükrözi, hanem az egyes műsorszámok lenyomata elfogalt helyének felel meg, azaz a műsorszámok a lejátszási sorrendben lévő könyvjelzők törlődnek.

Bookmarks lejátszása a kívánt sorrendben (Bookmark track play)

Amikor a könyvjelzővel megjelölt műsorszámok sorrendje nem a könyvjelző megadásának sorrendjét tükrözi, hanem az egyes műsorszámok lenyomata elfogalt helyének felel meg, azaz a műsorszámok a lejátszási sorrendben lévő könyvjelzők törlődnek.

Bookmarks lejátszása a kívánt sorrendben (Bookmark track play)

Amikor a könyvjelzővel megjelölt műsorszámok sorrendje nem a könyvjel